

| FB5A | 20CH Mode1 | 17CH Mode2 | DMX Value | Funciton |
|-------------|-----------------------|-----------------------|--|--|
| Dimmer | 1 | 1 | 0---255 | Darkness----->Bright |
| Dimmer FINE | 2 | | 0---255 | |
| Strobe | 3 | 2 | 0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255 | Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open |
| Color | 4 | 3 | 0---5 6---12 13---19 20---26 27---33 34---40 41---47 48---54 55---61 62---68 69---76 77---83 84---90 91---97 98---104 105---111 112---118 119---127 128---134 135---141 142---148 149---155 156---205 206---255 | White Color1+WHITE Color1 Color1+Color2 Color2 Color2+Color3 Color3 Color3+Color4 Color4 Color4+Color5 Color5 Color5+Color6 Color6 Color6+Color7 Color7 Color7+Color8 Color8 Color8+Color9 Color9 Color9+Color10 Color10 Color10+WHITE CW Rotation Slow--->Fast CCW Rotation Fast--->Slow |

| | | | | |
|---------------------------|---|---|--|---|
| Fixed Gobo | 5 | 4 | 0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---76 77---84 85---121 122---137 138---153 154---169 170---185 186---201 202---217 218---223 224---239 240---255 | WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 CW SlowRotation----->FastRotation WHITE CCW SlowRotation-----> FastRotation GOBO 1 Shake Slow---->Fast GOBO 2 Shake Slow---->Fast GOBO 3 Shake Slow---->Fast GOBO 4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO 6 Shake Slow---->Fast GOBO 7 Shake Slow---->Fast GOBO 8 Shake Slow---->Fast GOBO 9 Shake Slow---->Fast |
| Gobo1 Select (NOT FIT) | 6 | 5 | 0---2 3---5 6---10 11---16 17---22 23---28 29---34 35---40 41---52 53---70 71---88 89---106 107---124 125---142 143---160 161---178 179---196 197---226 218---255 | WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 1 Shake Slow---->Fast GOBO 2 Shake Slow---->Fast GOBO 3 Shake Slow---->Fast GOBO 4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO 6 Shake Slow---->Fast GOBO 7 Shake Slow---->Fast GOBO 8 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation |

| | | | | |
|---|----|----|--|--|
| GOBO1 index Rotation (NOT FIT) | 7 | 6 | 0---127 128---191 192---255 | Position 0 ° ---->360 ° (FINE in CH8) CW SlowRotation-----> FastRotation CCWFastRotation----->SlowRotation |
| GOBO1 indexRotation FINE (NOT FIT) | 8 | | 0---255 | GOBO1 index Rotation FINE |
| PRISM1 | 9 | 7 | 0---127 128--255 | EXCLUDED INSERTED |
| PRISM1 Rotation | 10 | 8 | 0---127 128---190 191---194 195---255 | Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCW Slow Rotation----->Fast Rotation |
| FORST | 11 | 9 | 0---127 128---255 | EXCLUDED INSERTED |
| FOCUS | 12 | 10 | 0---255 | |
| FOCUS FINE | 13 | | 0---255 | |
| PAN(X) | 14 | 11 | 0---255 | |
| PAN(X) FINE | 15 | 12 | 0---255 | |
| TILTE(Y) | 16 | 13 | 0---255 | |
| TILTE(Y) FINE | 17 | 14 | 0---255 | |
| P/T SPEED | 18 | 15 | 0---128 129---170 171---211 212---255 | |
| Lamp Control | 19 | 16 | 0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255 | Undefined Undefined Undefined Undefined Undefined Undefined Undefined Undefined |
| Control | 20 | 17 | 0---127 128---255 | Undefined Reset ALL(>4s) |