

SEER4000SPOT V1.0 NEW	31CH MODE1	25CH MODE2	DMX VALUE	FUNCTION
Dimmer	1	1	0--255	Brightness--->Darkness
Dimmer FINE	2		0--255	
Strobe,Shutter	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Close Slow Strobe--->Fast Strobe Open SlowPuls---->Fast Puls Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color	4	3	0---11 12---23 24--- 35 36--- 47 48--- 59 60---71 72--- 83 84---95 96---107 108---119 120--- 131 132---143 144---155 156--- 171 172--- 213 214--- 255	White Color1+White Color1 Color1 + Color2 Color2 Color2 + Color3 Color3 Color3 + Color4 Color4 Color4 + Color5 Color5 Color5 + Color6 Color6 Color6 + White CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Cyan	5	4	0---255	EXCLUDED---->INSERTED
Magenta	6	5	0---255	EXCLUDED---->INSERTED
Yellow	7	6	0---255	EXCLUDED---->INSERTED
CTC	8	7	0---255	EXCLUDED---->INSERTED
Color Macro	9		0---255	

Gobo1 Select	10	8	0---9 10--- 20 21--- 29 30---39 40--- 49 50--- 59 60---85 86---111 112---137 138---163 164---189 190---222 223---255	White Gobo1 Gobo2 Gobo3 Gobo4 Gobo5 Gobo1 Shake Slow--->Fast Gobo2 Shake Slow--->Fast Gobo3 Shake Slow--->Fast Gobo4 Shake Slow--->Fast Gobo5 Shake Slow--->Fast CW Rotation Slow---->Fast CCW Rotation Fast--->Slow
Gobo1 Index Rotating	11	9	0---127 128---191 192---255	0°----->360°(Fine in CH12) CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Gobo1 Index Rotating FINE	12		0---255	
Gobo2 Select	13	10	0---9 10--- 20 21--- 29 30---39 40--- 49 50--- 59 60---85 86---111 112---137 138---163 164---189 190---222 223---255	White Gobo1 Gobo2 Gobo3 Gobo4 Gobo5 Gobo1 Shake Slow--->Fast Gobo2 Shake Slow--->Fast Gobo3 Shake Slow--->Fast Gobo4 Shake Slow--->Fast Gobo5 Shake Slow--->Fast CW Rotation Slow---->Fast CCW Rotation Fast--->Slow
Gobo2 Index Rotating	14	11	0---127 128---191 192---255	0°----->360°(Fine in CH12) CW Rotation Slow--->Fast CCW Rotation Fast--->Slow
Gobo2 Index Rotating	15		0---255	

FINE				
Fixed Gobo Animation	16	12	0---9 10---40 41---51 52---62 63---73 74---84 85---95 96---116 117---137 138---158 159---179 180---200 201---226 227---255	WHITE Animation Shake Slow---->Fast Gobo1 Gobo2 Gobo3 Gobo4 Gobo5 Gobo1 Shake Slow--->Fast Gobo2 Shake Slow--->Fast Gobo3 Shake Slow--->Fast Gobo4 Shake Slow--->Fast Gobo5 Shake Slow--->Fast CW Rotation Slow--->Fast CCW Rotating Fast---Slow
IRIS	17	13	0---128 129---131 132---171 172---211 212---251 252---255	MAX----->MIN Close Slow Puls---->Fast Puls Slow Puls Fast Close---->Fast Puls Fast Close Slow Puls Fast Open---->Fast Puls Fast Open Open
PRISM	18	14	0---127 128---255	EXCLUDED INSERTED
PRISM Rotating	19	15	0---127 128---190 191---194 195---255	Position 0°-->360° CW Rotation Fast---> Slow STOP CCW Rotation Slow--->Fast
Forst	20	16	0---255	EXCLUDED----->INSERTED
Focus	21	17	0---255	
Focus FINE	22		0---255	
Zoom	23	18	0---255	
Zoom FINE	24		0---255	

PAN(x)	25	19	0---255	
PAN(X) FINE	26	20	0---255	
TILTE(Y)	27	21	0---255	
TILTE(Y) FINE	28	22	0---255	
P/T Speed	29	23	0---128 129---170 171---211 212---255 252---255	Fastest----->Slowest SlowSpeed (1/3 MaxSpeed) MediumSpeed (1/2 MaxSpeed) Fast Speed (Fastest Speed) Darkness when moving
Lamp Control	30	24	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(> 4s) Undefined LAMP ON(> 4s) Undefined LOW POWER Undefined FULL POWER
Control	31	25	0---127 128---153 154---179 180---205 206---231 232---255	Undefined Undefined Undefined Undefined Undefined Reset ALL(> 4s)

*NOTE:关闭灯泡后，请勿立即又打开灯泡，请等待大于 2 分钟之后再点灯泡。如果无法点亮灯泡，试试给灯泡一次“关灯泡”信号，然后再去点灯泡。